



GEN III - VVT THERMOSTAT OPERATION

HOW TO MAKE A CALL FOR HEAT OR COOL

Press any button to access Operations Mode of the Thermostat

Cool Call

If cooling is desired, set COOL set point 1 or more degrees below room temperature. Once desired temperature is set, ON icon will appear below set point. ON icon will flash until system is operating in COOL mode. Once system is in cooling mode, ON will remain constant.

Heat Call

If heating is desired, set HEAT set point 1 or more degrees above room temperature. Once desired temperature is set, ON icon will appear below set point. ON icon will flash until system is operating in HEAT mode. Once system is in heating mode, ON will remain constant.

Vent Mode

When all calls for heating and cooling are satisfied, damper controller will set the damper into VENT position and report to the thermostat VENT operations. During this time if GEN III controller is configured for FAN ON, recirculating air will be circulated to all zones.

Lock Thermostats

This is done at the MONITOR STAT, SYSTEM CONFIGURATION MENU. Contact building manager for advanced configuration

Override

To override thermostat operations when in the Unoccupied mode, press the AUTO button once and system will run in the Occupied mode for configured override time. System will terminate override after configured run time, if scheduled changeover occurs, or if AUTO button is pressed again.

REPLACE BATTERIES

Use a 5/64 Allen wrench to unscrew clockwise to release the thermostat from the sub-base. Set screw will recess into the sub-base.

Remove batteries from the thermostat and replace with new batteries confirming polarity of batteries.

Place the thermostat back on sub-base and tighten set screw counter clockwise.

SET THERMOSTAT SET POINT


Press any button to access Operations Mode of the Thermostat

Press the **SET** button - **COOL** or **HEAT** icon will flash on top right of the display.

If **COOL** icon is flashing, use the **UP** or **DOWN** buttons to raise or lower **COOL** set point to desired temperature.

If **HEAT** icon is flashing, use the **UP** or **DOWN** buttons to raise or lower **HEAT** set point to desired temperature.

To change from **COOL** to **HEAT**, or **HEAT** to **COOL**, press the **SET** button.

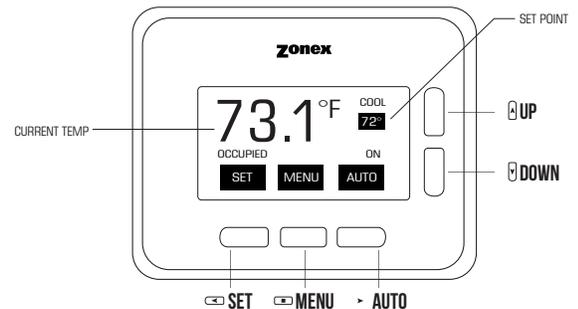

Confirm thermostat is in the Auto Mode. If OFF is displayed, hold OFF button for 15 seconds, OFF icon will change to AUTO, then release button for AUTO operation.