

# REMOTE SENSOR

## SUBMITTAL



## **RMTSEN** *Remote Sensor*

## DESCRIPTION

The remote sensor (RMTSEN) is used in applications that require the thermostat to be installed in a location remote from the space which is to be controlled.

The remote sensor is offered on all wired Zonex thermostats. The current thermostats include: EzTouchRS, EzTouchXRS, EzTouchVRS, SAMODRS and SATouchXRS.

For remote sensor application, the Zonex thermostat must be ordered with RS added to the thermostat model number as indicated above.

## TECHNICAL DATA


**Dimensions:** 2.75" W x 4.5" H x .22" D

**Color:** Stainless steel

**Mounting:** Single gang wall plate  
Interior installation only

**Operating Range:** -40 to 160°F

**Electrical:**  
2-wire lead  
Type III 10k Ohm Thermistor  
Silver plated copper  
Wire: 2 conductor 18 gauge thermostat wire

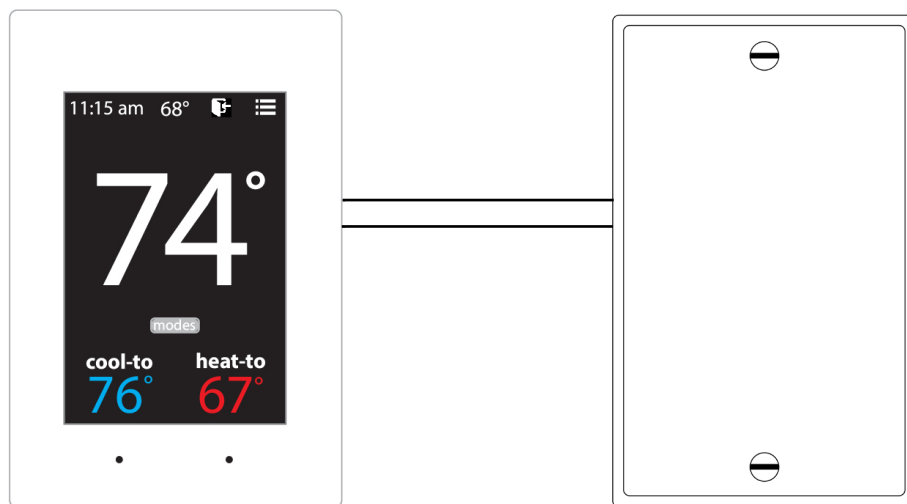

Use 18 gauge copper wire to connect the thermostat to the remote sensor. Max length up to 200'.

Rev 01/25