


## REMOTE SENSOR WIRING DIAGRAMS

### SINGLE REMOTE SENSOR

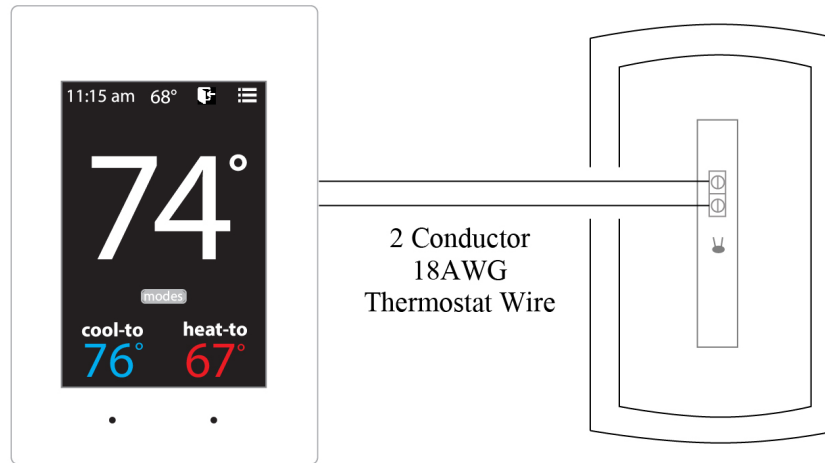

- The Remote Sensor must be wired to the RS thermostat sensor pigtails with field supplied 2-conductor thermostat wire.
  - The Remote Sensor wiring must not exceed 200'.
  - The 2-sensor conductors are connected to the thermostat pigtails with wire nuts, and screw terminals on the sensor mounting base.
- 
- The Remote Sensor is designed to be installed with Zonex Systems thermostats only: EzTouch-RS and EzTouchX-RS.  
NOTE: The thermostat must indicate **RS** on the end of the model designation to be compatible.
  - To remove the sensor cover, use a 1/16" Allen wrench on bottom set screws.

Rev 8/12/20