


# DAIKIN - AZA16WSPDKC

## Thermostat Interface Wiring Diagram

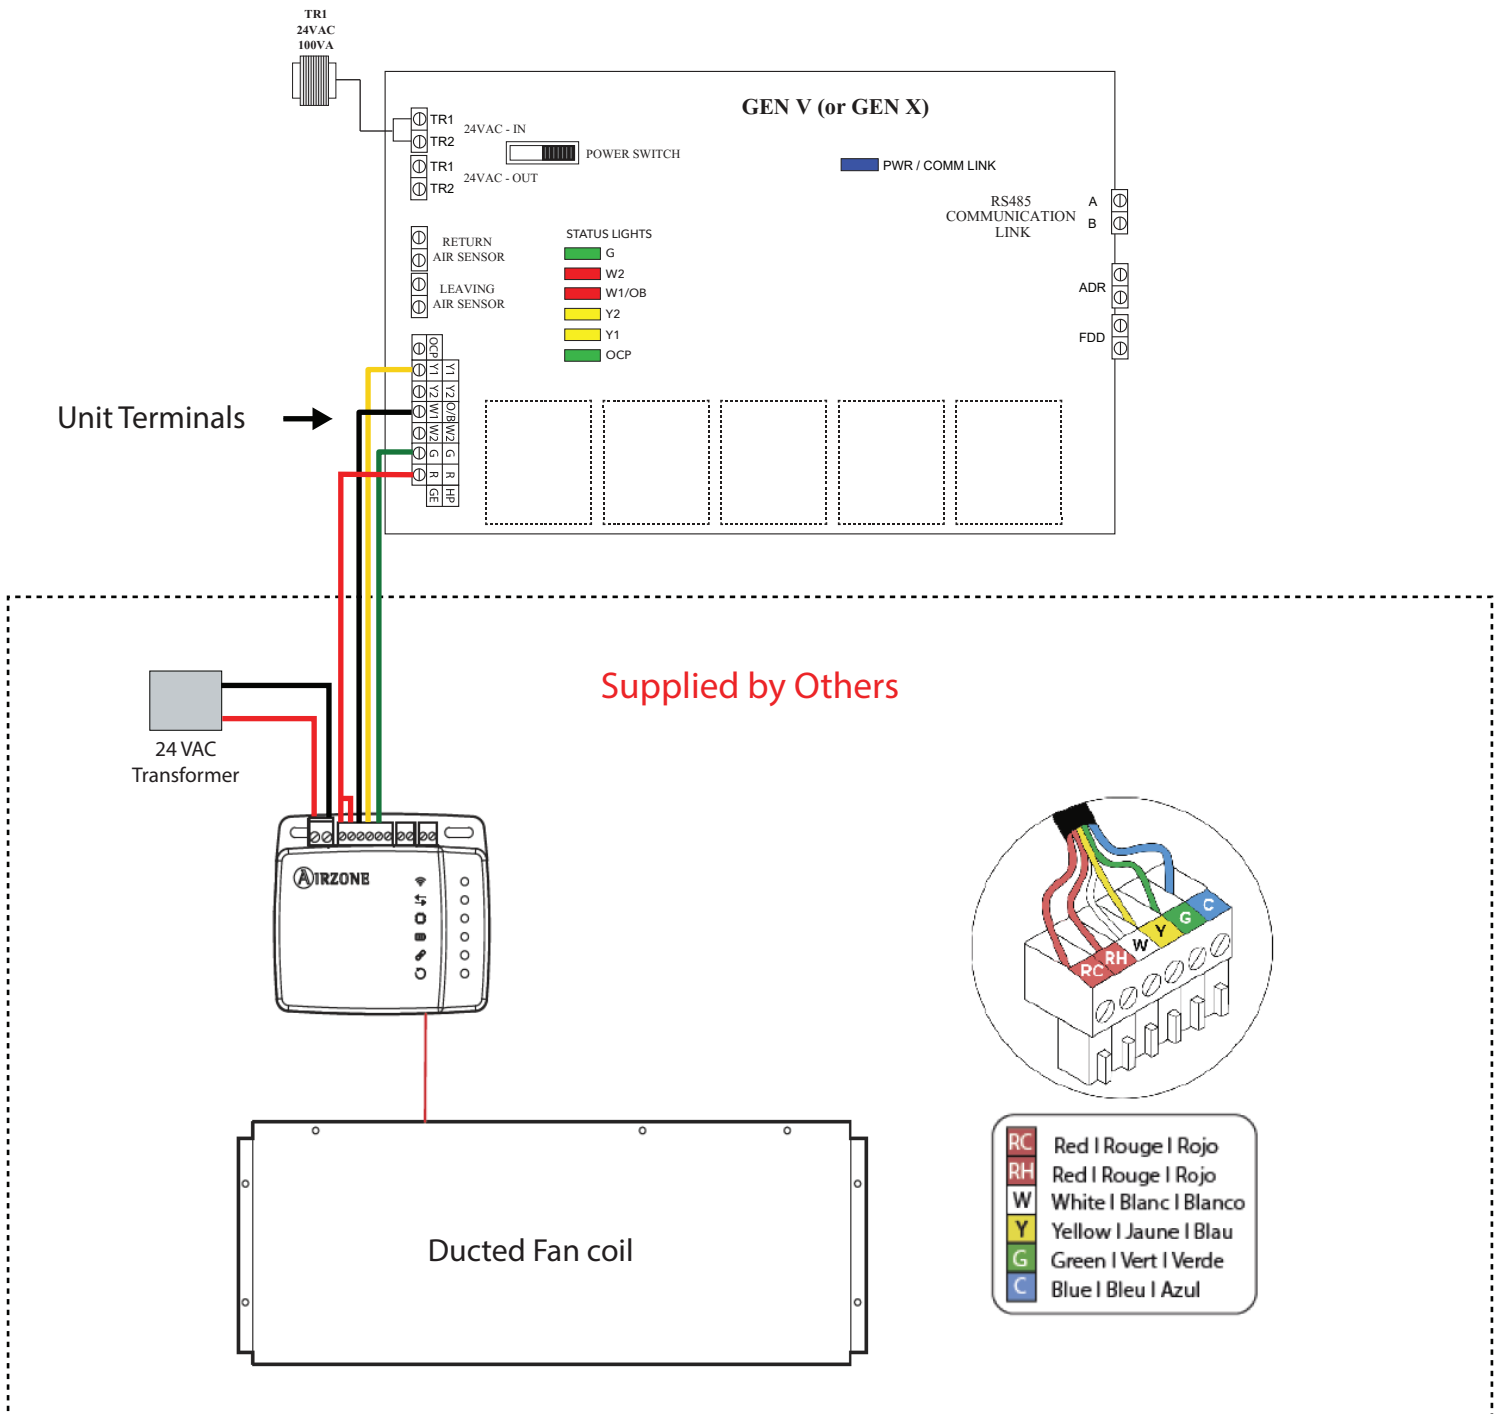

### NOTES:

- Follow all of Daikin's installation instructions for the AZA16WSPDKC.
- The GEN V/GEN X & the thermostat interface are powered by separate 24 VAC transformers.
- Place a jumper between the RC & RH terminals at the thermostat interface.
- "C" common from the thermostat interface is NOT connected to the GEN V/GEN X controller.