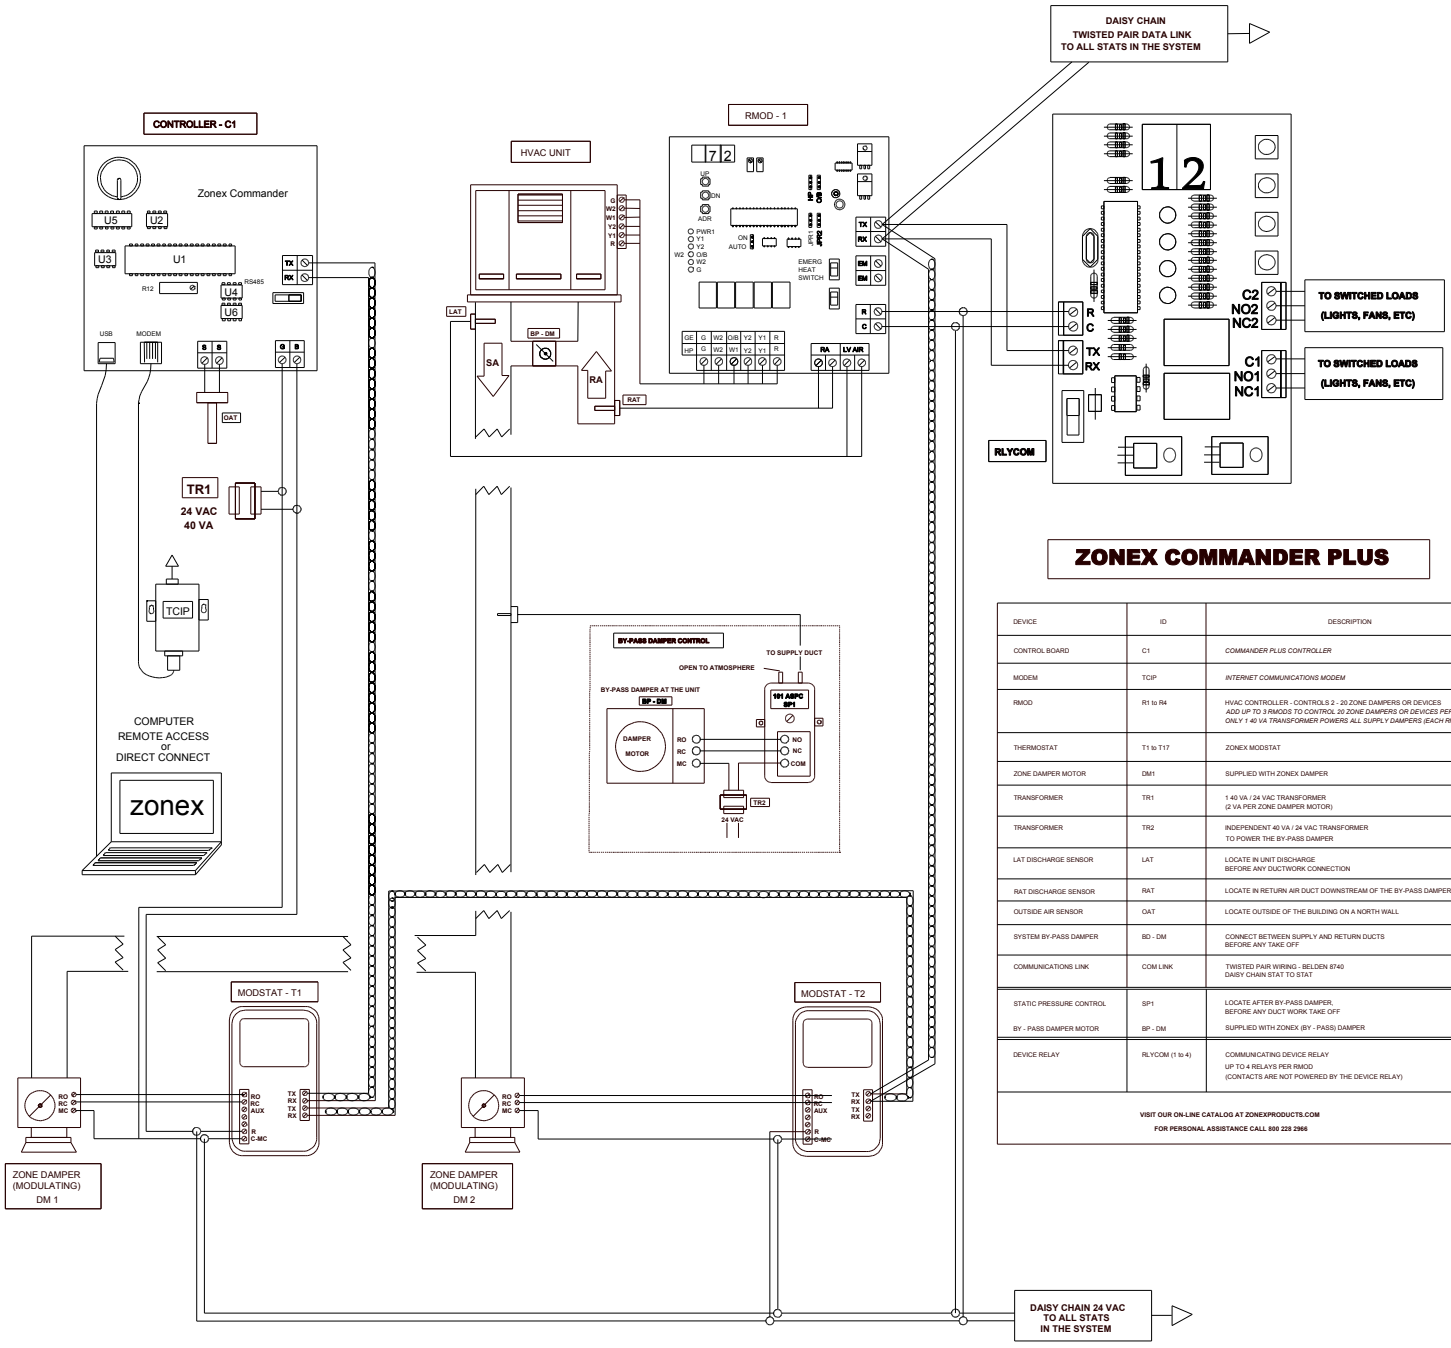

ZONEX COMMANDER PLUS

DEVICE	ID	DESCRIPTION
CONTROL BOARD	C1	*COMMANDER PLUS CONTROLLER*
MODEM	TCIP	*INTERNET COMMUNICATIONS MODEM*
RMOD	R1 to R4	HVAC CONTROLLER - CONTROLS 2 - 20 ZONE DAMPERS OR DEVICES *ADD UP TO 3 RMODS TO CONTROL 20 ZONE DAMPERS OR DEVICES PER RMOD* *ONLY 1 40 VA TRANSFORMER POWERS ALL SUPPLY DAMPERS (EACH RMOD)*
THERMOSTAT	T1 to T17	ZONEX MODSTAT
ZONE DAMPER MOTOR	DM1	SUPPLIED WITH ZONEX DAMPER
TRANSFORMER	TR1	1 40 VA / 24 VAC TRANSFORMER (2 VA PER ZONE DAMPER MOTOR)
TRANSFORMER	TR2	INDEPENDENT 40 VA / 24 VAC TRANSFORMER TO POWER THE BY-PASS DAMPER
LAT DISCHARGE SENSOR	LAT	LOCATE IN UNIT DISCHARGE BEFORE ANY DUCTWORK CONNECTION
RAT DISCHARGE SENSOR	RAT	LOCATE IN RETURN AIR DUCT DOWNSTREAM OF THE BY-PASS DAMPER
OUTSIDE AIR SENSOR	OAT	LOCATE OUTSIDE OF THE BUILDING ON A NORTH WALL
SYSTEM BY-PASS DAMPER	BD - DM	CONNECT BETWEEN SUPPLY AND RETURN DUCTS BEFORE ANY TAKE OFF
COMMUNICATIONS LINK	COM LINK	TWISTED PAIR WIRING - BELDEN 8740 DAISY CHAIN STAT TO STAT
STATIC PRESSURE CONTROL	SP1	LOCATE AFTER BY-PASS DAMPER, BEFORE ANY DUCT WORK TAKE OFF
BY - PASS DAMPER MOTOR	BP - DM	SUPPLIED WITH ZONEX (BY - PASS) DAMPER
DEVICE RELAY	RLYCOM (1 to 4)	COMMUNICATING DEVICE RELAY UP TO 4 RELAYS PER RMOD (CONTACTS ARE NOT POWERED BY THE DEVICE RELAY)

VISIT OUR ON-LINE CATALOG AT ZONEXPRODUCTS.COM

FOR PERSONAL ASSISTANCE CALL 800 228 2966